

7. DRILL RIGS

Type

Down the hole (DTH)
Hydraulic

Pneumatic, excluding compressor
Pneumatic, including compressor

WHERE TO HIRE

FREE STATE

Express Plant Hire (Bloemfontein) (051) 436-4891

GAUTENG & NORTH-WEST

Thoka Geosciences (Randfontein) (011) 412 1449

PORT ELIZABETH

Venter Plant Hire (082) 655 7590