

## 7. DRILL RIGS

Type			
Down the hole (DTH)		Pneumatic, excluding compressor	
Hydraulic		Pneumatic, including compressor	
WHERE TO HIRE			
FREE STATE		PORT ELIZABETH	
Express Plant Hire (Bloemfontein)	(051) 436-4891	Barloworld Equipment The Cat Rental Store (PE)	(041) 486 1303
GAUTENG & NORTH-WEST		Venter Plant Hire	(082) 655 7590
Barloworld Equipment The Cat Rental Store (Isando)	(011) 929-0600		
Thoka Geosciences (Randfontein)	(011) 412 1449		